

## **Preliminary Data Sheet**

# ISP1510 Smart Ultra Wide Band and Bluetooth Low Energy Module with MCU and Antennas

This highly miniaturized LGA module, 9 x 16 x 1.9 mm, is based on the DW1000 UWB transceiver and nRF52832 BLE chip. Integrating a Cortex™ M4 CPU, flash and RAM memory combined with optimized antennas, ISP1510 can be used as a stand-alone ranging module using a simple user interface via the SPI connection. Alternatively it can be used in conjunction with an external MCU.



## **Key Features**

- IEEE802.15.4-2011 UWB compliant
- Single Mode BLE V4.2 stack
- NFC-A Tag for OOB pairing
- Spatial resolution better than 10 cm
- Fully integrated UWB & BLE matching and Antennas
- Integrated UWB 38.4 MHz and BLE 32 MHz & 32.768 kHz Clocks
- DC/DC converters
- UWB section based on DecaWave DW1000
- BLE section based on Nordic Semi nRF52
- Externally Controlled or using embedded 32-bit ARM Cortex M4 CPU
- 512 kB Flash and 64 kB SRAM
- Analog and Digital peripherals
- SPI interface
- Supply Voltage 2.8V to 3.6V
- Very small size 9.0 x 16.0 x 1.9 mm
- Temperature -40 to +85 °C











## **Applications**

- Precision Real Time Location Systems (RTLS) for Healthcare, Sport and Wellness, Consumer, Industrial ...
- Security bubble
- Access control
- Indoor positioning

#### Certifications

- Fully FCC certified module
- Fully CE certified module
- Fully IC certified module
- Bluetooth SIG certified QDL listing
- RoHS compliant



## **Preliminary Data Sheet**

## Contents

1.	Block Diagram	3
2.	Specifications	
2.1. 2.2.	Absolute Maximum Ratings  Operating Conditions	4
2.3. 2.4.	Power Consumption	
2. <del>4</del> . 2.5.	Radio Specifications	
2.6.	Electrical Schematic	
3.	Pin Description	9
4.	Mechanical Outlines	
4.1.	Mechanical Dimensions	
4.2.	SMT Assembly Guidelines	
4.3.	Antenna Keep-Out Zone	
5.	Product Development Tools	
5.1. 5.2.	Hardware	
5.∠. 5.3.	Firmware Development Tools	
6. 6.	Packaging & Ordering information	
<b>6.</b> 6.1.	Marking	
6.2.	Prototype Packaging	
6.3.	Jedec Trays	
6.4.	Tape and Reel	
6.5.	Ordering Information	18
7.	Storage & Soldering information	19
7.1.	Storage and Handling	
7.2.	Moisture Sensitivity	
7.3.	Soldering information	20
8.	Quality & User information	
8.1.	Pending Certifications	
8.2. 8.3.	USA – User information	
8.4.	Canada – User information	
6.4. 8.5.	Informations concernant l'exposition aux fréquences radio (RF)	
8.6.	Discontinuity	
8.7	Disclaimer	




## **Preliminary Data Sheet**

## 1. Block Diagram

This module is based on DecaWave DW1000 single-chip UWB transceiver and nRF52832 Nordic Semiconductor 2.4GHz wireless System on Chip (SoC). It integrates a 32-bit ARM Cortex™ M4 CPU, flash memory as well as analog and digital peripherals. It can support:

- UWB communication compliant to IEEE802.15.4. ISP151001 UWB section can be used as standalone ranging module using a simple user interface controlled over the air by Bluetooth or by SPI. Alternatively, it can be used in conjunction with an external microprocessor for more complex positioning algorithms, in which case all the processing is carried out externally to the module.
- BLE connectivity compliant to Bluetooth V4.2. ISP1510 BLE section can be used either in Peripheral or Central roles for BLE. Fully qualified BLE stacks for nRF52832 are implemented in the S132 SoftDevice which can be freely downloaded.

Despite the small size of  $9.0 \times 16.0 \times 1.9 \text{ mm}$ , the module integrates decoupling capacitors, 38.4 MHz crystal for UWB, 32 MHz and 32.768 kHz crystals for BLE, DC-DC converters, RF matching circuits and two antennas in addition to the wireless SoCs. Ultra-low power consumption and advanced power management enables battery lifetimes up to several years on a coin cell battery.

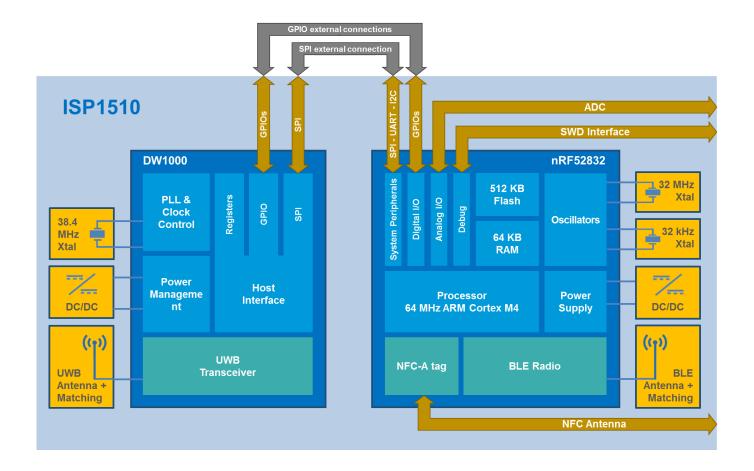



## **Preliminary Data Sheet**

## 2. Specifications

The specifications of the module follow those of the nRF52832 and DW1000. The following high level parameters are given for the module.

## 2.1. Absolute Maximum Ratings

Parameter	Min	Тур	Max	Unit
Supply Voltage VCC	-0.3		3.9	V
Supply Voltage VDD, VDDAON, VDDIO	-0.3		4.0	V
IO Pins P0.xx, GPIOx, SPICLK, SPIMISO, SPIMOSI, SPICS, SRESET, WAKEUP	-0.3		3.6	V
UWB RF Input Level			0	dBm
BLE RF Input Level			10	dBm
NFC Antenna pin current			80	mA
Storage Temperature	-40		+85	°C
Moisture Sensitivity Level			5	-
Flash Endurance			10000	cycles



#### **ATTENTION**

CONSERVE PRECAUTION FOR HANDLING ELECTROSTATIC SENSITIVE DEVICES Human Body Model Class 3A

#### 2.2. Operating Conditions

Parameter	Min	Тур	Max	Unit
Operating Supply Voltage VCC, VDD, VDDAON	2.8	3.0	3.6	V
Operating Supply Voltage VDDIO (used during programming of calibration settings in DW1000 OTP)	3.7	3.8	3.9	V
Operating Input Voltage IO Pins P0.xx, GPIOx, SPICLK, SPIMISO, SPIMOSI, SPICS, SRESET, WAKEUP	-0.3		3.6	V
Operating Temperature Range	-30	+25	+85	°C



## **Preliminary Data Sheet**

## 2.3. Current Consumption

Parameter	Min	Тур	Max	Unit
UWB receiver			180	mA
UWB transmitter			140	mA
UWB idle mode		18		mA
UWB sleep mode		1		μA
UWB deep sleep mode		50		nA
BLE Peak current, Receiver active (1)		6.1		mA
BLE Peak current, Transmitter active +4 dBm Output Power (2)		7.9		mA
BLE Peak current, Transmitter active 0 dBm Output Power (2)		5.4		mA
CPU System OFF current, no RAM retention		0.7		μA
CPU System ON base current, full RAM retention		1.5		μΑ
CPU Additional RAM retention current per 4 KB block		40		nA

<sup>(1)</sup> DC-DC enabled, Power supply 3V, 1 Msps

#### 2.4. Clock Sources

Parameter	Min	Тур	Max	Unit
Internal High Frequency Clock for RF Stability: 38.4 MHz Crystal Frequency Tolerance (1)			± 30	ppm
Internal High Frequency Clock for RF Stability: 32 MHz Crystal Frequency Tolerance (1)			± 40	ppm
Internal Low Frequency Clock for BLE Synchronization: 32.768 kHz Crystal Frequency Tolerance (1)			± 40	ppm
Internal Low Frequency Clock for BLE Synchronization: RC Oscillator (2)			± 250	ppm
RF Frequency tolerance: For UWB operation Channel 5			± 30	ppm
RF Frequency tolerance: For BLE operation Channels 0 to 39			± 40	ppm

<sup>(1)</sup> Including initial tolerance, drift, aging, and frequency pulling

(2) Frequency tolerance after calibration

<sup>(2)</sup> DC-DC enabled, Power supply 3V




## **Preliminary Data Sheet**

## 2.5. Radio Specifications

Parameter	Min	Тур	Max	Unit
UWB channel center frequency		6489.6		Mhz
UWB channel bandwidth		499.2		MHz
UWB Input at 1dB compression point		-39		dBm
UWB Rx sensitivity Level for BER <1%		-93		dBm
UWB Output Power spectral density		-39	-35	dBm/MHz
UWB Antenna Gain	-5	-1	0	dBi
UWB Load impedance		50		Ω
BLE Frequency Range	2402		2480	MHz
BLE Channel 0 to 39 Spacing		2		MHz
BLE Output Power Channels 0 to 39	-20		+4	dBm
BLE Rx sensitivity Level for BER <0,1% ideal Tx	-96			dBm
BLE Antenna Gain		0.6		dBi
BLE EIRP	-19.4		4.6	dBm
BLE Range Open field @1m height (1)		100		m

#### (1) Data Rate 1000 / 2000 Kbps

#### **Typical UWB Antenna Return Loss**

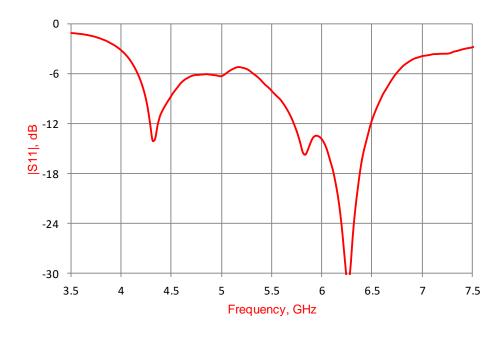




## **Preliminary Data Sheet**


#### 2.6. Electrical Schematic

Electrical schematic showing ISP1510 module connections

#### Global Block Diagram

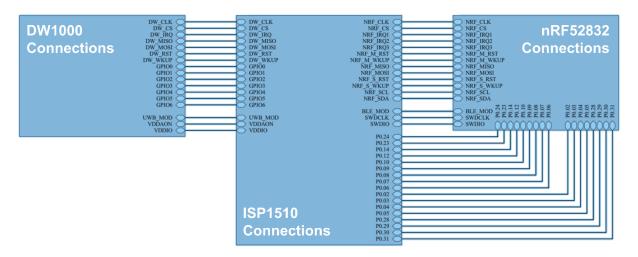


#### Details of ISP1510 connections

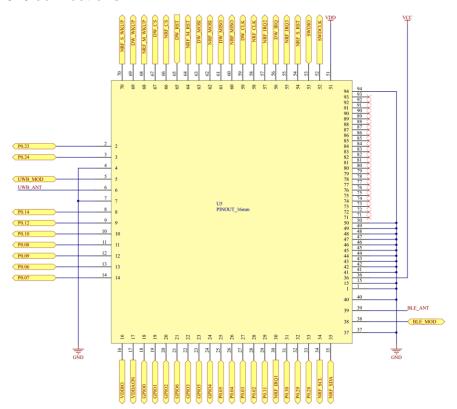




## **Preliminary Data Sheet**

#### **♣** Details of DW1000 connections

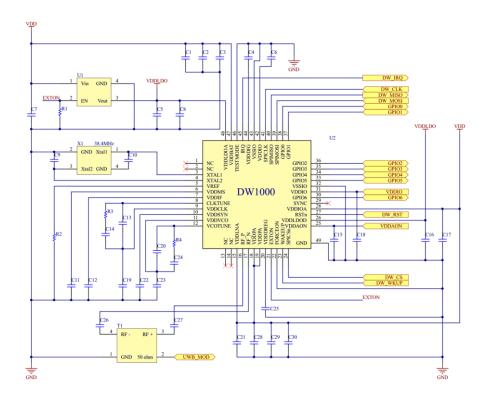

#### ♣ Details of nRF52832 connections

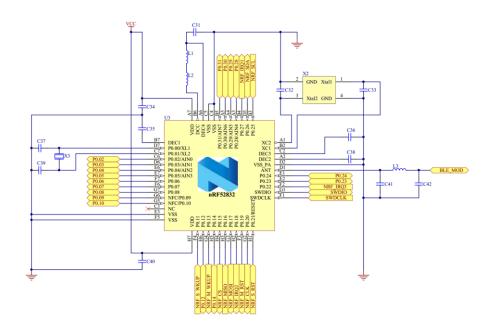



## **Preliminary Data Sheet**

## 3. Pin Description

The module uses an LGA format on a 0.50 mm pitch. The pad layout follows the QFN Jedec standard for LGA parts. The NC pads are to be connected to isolated metal pads on the application PCB for mechanical stability and reliability (drop test).

Pin	Name	Pin function	Description
1	GND	Ground	Power Ground – Must be connected to ground on application PCB
2	P0.23	Digital I/O	nRF52 general purpose I/O pin
3	P0.24	Digital I/O	nRF52 general purpose I/O pin
4	GND	Ground	Analog Ground – Must be connected to ground on application PCB
5	UWBMOD	RF I/O	UWB RF I/O pin of the module
			Should be connected to Pin 6 UWBANT for normal operation
6	UWBANT	RF I/O	Internal UWB antenna RF I/O pin
			It should be connected to Pin 5 UWBMOD for normal operation
7	GND	Ground	Analog Ground – Must be connected to ground on application PCB
8	P0.14	Digital I/O	nRF52 general purpose I/O pin
9	P0.12	Digital I/O	nRF52 general purpose I/O pin
10	P0.10	Digital I/O	nRF52 general purpose I/O pin
	NFC2	RF I/O	NFC antenna connection pin
11	P0.08	Digital I/O	nRF52 general purpose I/O pin
12	P0.09	Digital I/O	nRF52 general purpose I/O pin
	NFC1	NFC Input	NFC antenna connection pin
13	P0.06	Digital I/O	nRF52 general purpose I/O pin
14	P0.07	Digital I/O	nRF52 general purpose I/O pin
15	GND	Ground	Power Ground – Must be connected to ground on application PCB
16	VDDIO	Power	External supply for DW1000 OTP
			Internal supply for DW1000 SPI Mode Configuration
17	VDDAON	Power	External supply for the Always-ON portion of the DW1000 chip
			If use of DW1000 Deep Sleep mode, should be connected to VCC
18	GPIO0	Digital I/O	DW1000 general purpose I/O pin
	RXOKLED		May be configured to drive a LED on reception of a good frame
19	GPIO1	Digital I/O	DW1000 general purpose I/O pin
	SFDLED		May be configured to drive a LED on detection of a Start Frame
	SPULED		Delimiter
20	GPIO2	Digital I/O	DW1000 general purpose I/O pin
	RXLED		May be configured to drive a LED during receive mode
21	SPIPOL	Digital I/O	On power-up selects DW1000 SPI polarity for SPI operation mode
	GPIO6		After power-up DW1000 general purpose I/O pin
	EXTRXE		May be configured to go high on receive mode
22	GPIO3	Digital I/O	DW1000 general purpose I/O pin
	TXLED		May be configured to drive a LED after transmission
23	SPIPHA	Digital I/O	On power-up selects DW1000 SPI phase for SPI operation mode
	GPIO5		After power-up DW1000 general purpose I/O pin
	EXTTXE		May be configured to go high on transmit mode
24	GPIO4	Digital I/O	DW1000 general purpose I/O pin
	EXTPA		May be configured to enable an External Power Amplifier
25	P0.05	Digital I/O	nRF52 general purpose I/O pin
	AIN3	Analog Input	SAADC / COMP / LPCOMP input




## **Preliminary Data Sheet**

P0.04   Digital I/O   Analog Input   SAADC / COMP / LPCOMP input	Pin	Name	Pin function	Description
P0.03	26	P0.04	Digital I/O	
AlN1		AIN2		SAADC / COMP / LPCOMP input
P0.02	27		Digital I/O	
AlNO Analog Input SAADC / COMP / LPCOMP input AlN7 Analog Input SAADC / COMP / LPCOMP input AlN7 Analog Input SAADC / COMP / LPCOMP input 30 P0.27 Digital I/O nRF52 general purpose I/O pin 31 P0.30 Digital I/O nRF52 general purpose I/O pin AlN6 Analog Input SAADC / COMP / LPCOMP input 32 P0.29 Digital I/O nRF52 general purpose I/O pin AlN6 Analog Input SAADC / COMP / LPCOMP input 33 P0.28 Digital I/O nRF52 general purpose I/O pin AlN4 Analog Input SAADC / COMP / LPCOMP input 34 P0.25 Digital I/O nRF52 general purpose I/O pin AlN4 Analog Input SAADC / COMP / LPCOMP input 35 P0.26 Digital I/O nRF52 general purpose I/O pin 36 VCC Power External supply for NRF52 37 GND Ground Analog Ground - Must be connected to ground on application PCB BLEANT RF I/O BLE RF I/O pin of the module Should be connected to Pin 39 BLEANT for normal operation 40 GND Ground Analog Ground - Must be connected to ground on application PCB 41 GND Ground Analog Ground - Must be connected to ground on application PCB 42 GND Ground Analog Ground - Must be connected to ground on application PCB 43 GND Ground Analog Ground - Must be connected to ground on application PCB 44 GND Ground Analog Ground - Must be connected to ground on application PCB 45 GND Ground Analog Ground - Must be connected to ground on application PCB 46 GND Ground Analog Ground - Must be connected to ground on application PCB 47 GND Ground Analog Ground - Must be connected to ground on application PCB 48 GND Ground Analog Ground - Must be connected to ground on application PCB 49 GND Ground Analog Ground - Must be connected to ground on application PCB 50 GND Ground Analog Ground - Must be connected to ground on application PCB 51 VDD Power External supply for PM 1000 52 SWDCLK Digital I/O NRF52 Serial Wire Debug I/O for debug and programming 53 GND Ground Analog Ground - Must be connected to ground on application PCB 54 P0.21 Digital I/O NRF52 General purpose I/O pin 55 P0.22 Digital I/O NRF52 General purpose I/O pin 56 P0.28 Digital I/O NRF52 General purpose I/O pin 57 P0.1				
P0.31   Digital I/O   NRF52 general purpose I/O pin	28			
AINT Analog Input SAADC / COMP / LPCOMP input  P0.27 Digital I/O nRF52 general purpose I/O pin  AIN6 Analog Input SAADC / COMP / LPCOMP input  P0.29 Digital I/O nRF52 general purpose I/O pin  AIN6 Analog Input SAADC / COMP / LPCOMP input  P0.29 Digital I/O nRF52 general purpose I/O pin  AIN5 Analog Input SAADC / COMP / LPCOMP input  AIN6 Analog Input SAADC / COMP / LPCOMP input  P0.28 Digital I/O nRF52 general purpose I/O pin  AIN4 Analog Input SAADC / COMP / LPCOMP input  AIN6 Analog Input SAADC / COMP / LPCOMP input  AIN6 Analog Input SAADC / COMP / LPCOMP input  AIN6 Analog Input SAADC / COMP / LPCOMP input  AIN6 Analog Input SAADC / COMP / LPCOMP input  AIN6 Analog Input SAADC / COMP / LPCOMP input  AIN6 Analog Input SAADC / COMP / LPCOMP input  AIN6 Analog Input SAADC / COMP / LPCOMP input  AIN6 Analog Input SAADC / COMP / LPCOMP input  AIN6 Analog Input SAADC / COMP / LPCOMP input  AIN6 Analog Input SAADC / COMP / LPCOMP input  AIN6 Analog Ground - MISE DE CONTROL INPUT				
P0.27   Digital I/O   nRF52 general purpose I/O pin	29			
P0.30   Digital I/O   Analog Input   SAADC / COMP / LPCOMP input				
AlN6 Anatog Input SAADC COMP / LPCOMP input  32 P0.29 Digital I/O nRF52 general purpose I/O pin  AlN5 Anatog Input SAADC / COMP / LPCOMP input  33 P0.28 Digital I/O nRF52 general purpose I/O pin  AlN4 Anatog Input SAADC / COMP / LPCOMP input  34 P0.25 Digital I/O nRF52 general purpose I/O pin  35 P0.26 Digital I/O nRF52 general purpose I/O pin  36 VCC Power External supply for NRF52  37 GND Ground Anatog Ground - Must be connected to ground on application PCB  38 BLEMOD RF I/O BLE RF I/O pin of the module  Should be connected to Pin 39 BLEANT for normal operation  19 BLEANT RF I/O Internal BLE antenna RF I/O pin  Should be connected to Pin 38 BLEMOD for normal operation  40 GND Ground Anatog Ground - Must be connected to ground on application PCB  41 GND Ground Anatog Ground - Must be connected to ground on application PCB  42 GND Ground Anatog Ground - Must be connected to ground on application PCB  43 GND Ground Anatog Ground - Must be connected to ground on application PCB  44 GND Ground Anatog Ground - Must be connected to ground on application PCB  45 GND Ground Anatog Ground - Must be connected to ground on application PCB  46 GND Ground Anatog Ground - Must be connected to ground on application PCB  47 GND Ground Anatog Ground - Must be connected to ground on application PCB  48 GND Ground Anatog Ground - Must be connected to ground on application PCB  49 GND Ground Anatog Ground - Must be connected to ground on application PCB  40 GND Ground Anatog Ground - Must be connected to ground on application PCB  41 GND Ground Anatog Ground - Must be connected to ground on application PCB  42 GND Ground Anatog Ground - Must be connected to ground on application PCB  43 GND Ground Anatog Ground - Must be connected to ground on application PCB  44 GND Ground Anatog Ground - Must be connected to ground on application PCB  45 GND Ground Anatog Ground - Must be connected to ground on application PCB  46 GND Ground Anatog Ground - Must be connected to ground on application PCB  47 GND Ground Anatog Ground - Must be co				
P0.29   Digital I/O   Analog Input   SAADC / COMP / LPCOMP input	31			
ANS Analog Input SAADC COMP / LPCOMP input  33 P0.28 Digital I/O nRF52 general purpose I/O pin  AIN4 Analog Input SAADC / COMP / LPCOMP input  34 P0.25 Digital I/O nRF52 general purpose I/O pin  35 P0.26 Digital I/O nRF52 general purpose I/O pin  36 VCC Power External supply for NRF52  37 GND Ground Analog Ground – Must be connected to ground on application PCB  38 BLEMOD RF I/O BLE RF I/O pin of the module  Should be connected to Pin 39 BLEANT for normal operation  39 BLEANT RF I/O Internal BLE antenna RF I/O pin  Should be connected to Pin 39 BLEMOD for normal operation  40 GND Ground Analog Ground – Must be connected to ground on application PCB  41 GND Ground Analog Ground – Must be connected to ground on application PCB  42 GND Ground Analog Ground – Must be connected to ground on application PCB  43 GND Ground Analog Ground – Must be connected to ground on application PCB  44 GND Ground Analog Ground – Must be connected to ground on application PCB  45 GND Ground Analog Ground – Must be connected to ground on application PCB  46 GND Ground Analog Ground – Must be connected to ground on application PCB  47 GND Ground Analog Ground – Must be connected to ground on application PCB  48 GND Ground Analog Ground – Must be connected to ground on application PCB  49 GND Ground Analog Ground – Must be connected to ground on application PCB  49 GND Ground Analog Ground – Must be connected to ground on application PCB  49 GND Ground Analog Ground – Must be connected to ground on application PCB  50 GND Ground Analog Ground – Must be connected to ground on application PCB  51 VDD Power External supply for DW1000  52 SWDCLK Digital I/O RF52 general purpose I/O pin  MRESET Marks Propriet I/O RF52 general purpose I/O pin  MRESET Marks Propriet I/O RF52 general purpose I/O pin  If IRQ is not required, DW1000 general purpose I/O pin  If IRQ is not required, DW1000 general purpose I/O pin  If IRQ is not required, DW1000 general purpose I/O pin  If IRQ is not required, DW1000 general purpose I/O pin  If IRQ is not required,				
Po.28	32			
AIN4 Analog Input SAADC. COMP / LPCOMP input  34 P0.25 Digital I/O nRF52 general purpose I/O pin  35 P0.26 Digital I/O nRF52 general purpose I/O pin  36 VCC Power External supply for NRF52  37 GND Ground Analog Ground – Must be connected to ground on application PCB  38 BLEMOD RF I/O BLE RF I/O pin of the module Should be connected to Pin 39 BLEANT for normal operation  39 BLEANT RF I/O Internal BLE antenna RF I/O pin  40 GND Ground Analog Ground – Must be connected to ground on application PCB  41 GND Ground Analog Ground – Must be connected to ground on application PCB  42 GND Ground Analog Ground – Must be connected to ground on application PCB  43 GND Ground Analog Ground – Must be connected to ground on application PCB  44 GND Ground Analog Ground – Must be connected to ground on application PCB  45 GND Ground Analog Ground – Must be connected to ground on application PCB  46 GND Ground Analog Ground – Must be connected to ground on application PCB  47 GND Ground Analog Ground – Must be connected to ground on application PCB  48 GND Ground Analog Ground – Must be connected to ground on application PCB  49 GND Ground Analog Ground – Must be connected to ground on application PCB  48 GND Ground Analog Ground – Must be connected to ground on application PCB  49 GND Ground Analog Ground – Must be connected to ground on application PCB  50 GND Ground Analog Ground – Must be connected to ground on application PCB  51 VDD Ground Analog Ground – Must be connected to ground on application PCB  52 SWDCLK Digital I/O RF52 Serial Wire Debug clock input for debug and programming  53 SWDIO Digital I/O RF52 general purpose I/O pin  55 P0.21 Digital I/O RF52 general purpose I/O pin  56 P0.22 Digital I/O RF52 general purpose I/O pin  57 P0.18 Digital I/O RF52 general purpose I/O pin  58 P0.20 Digital I/O RF52 general purpose I/O pin  58 SPICLK Digital I/O RF52 general purpose I/O pin  59 SPICLK Digital I/O RF52 general purpose I/O pin				
P0.25   Digital I/O   nRF52 general purpose I/O pin	33			
35	2.1			
Section   Sect				
37 GND   Ground   Analog Ground – Must be connected to ground on application PCB			<u> </u>	
BLEMOD   RF I/O   BLE RF I/O pin of the module   Should be connected to Pin 39 BLEANT for normal operation				
Should be connected to Pin 39 BLEANT for normal operation   RF I/O   Internal BLE antenna RF I/O pin   Should be connected to Pin 38 BLEMOD for normal operation   Should be connected to Pin 38 BLEMOD for normal operation   Analog Ground   Must be connected to ground on application PCB   Analog Ground   Must be connected to ground on application PCB   Analog Ground   Must be connected to ground on application PCB   Analog Ground   Must be connected to ground on application PCB   Analog Ground   Must be connected to ground on application PCB   Analog Ground   Must be connected to ground on application PCB   Analog Ground   Must be connected to ground on application PCB   Analog Ground   Analog Ground   Must be connected to ground on application PCB   Analog Ground   Analog Ground   Must be connected to ground on application PCB   Analog Ground   Analog Ground   Must be connected to ground on application PCB   Analog Ground   Analog Ground   Must be connected to ground on application PCB   Analog Ground   Analog Ground   Must be connected to ground on application PCB   Analog Ground   Analog Ground   Must be connected to ground on application PCB   GND   Ground   Analog Ground   Must be connected to ground on application PCB   GND   Ground   Analog Ground   Must be connected to ground on application PCB   SWDCLK   Digital I/O   Digital I/O   NRF52 Serial Wire Debug clock input for debug and programming   SWDIO   Digital I/O   NRF52 general purpose I/O pin   MRESET   Digital I/O   NRF52 general purpose I/O pin   If IRQ is not required, DW1000 general purpose I/O pin   If IRQ is not required, DW1000 general purpose I/O pin   If IRQ is not required, DW1000 general purpose I/O pin   SPICLK   Digital I/O   DW1000 SPI clock   Should be connected to nRF52 general purpose I/O pin   DW1000 SPI clock   Should be connected to nRF52 general purpose I/O pin   DW1000 SPI clock   Shoul				Analog Ground – Must be connected to ground on application PCB
BLEANT   RF I/O   Internal BLE antenna RF I/O pin   Should be connected to Pin 38 BLEMOD for normal operation   Should be connected to Pin 38 BLEMOD for normal operation   Analog Ground   Analog Ground - Must be connected to ground on application PCB   42   GND   Ground   Analog Ground - Must be connected to ground on application PCB   43   GND   Ground   Analog Ground - Must be connected to ground on application PCB   44   GND   Ground   Analog Ground - Must be connected to ground on application PCB   45   GND   Ground   Analog Ground - Must be connected to ground on application PCB   46   GND   Ground   Analog Ground - Must be connected to ground on application PCB   47   GND   Ground   Analog Ground - Must be connected to ground on application PCB   47   GND   Ground   Analog Ground - Must be connected to ground on application PCB   48   GND   Ground   Analog Ground - Must be connected to ground on application PCB   49   GND   Ground   Analog Ground - Must be connected to ground on application PCB   GND   Ground   Analog Ground - Must be connected to ground on application PCB   GND   Ground   Analog Ground - Must be connected to ground on application PCB   GND   Ground   Analog Ground - Must be connected to ground on application PCB   GND   Ground   Analog Ground - Must be connected to ground on application PCB   GND   Ground   Analog Ground - Must be connected to ground on application PCB   GND   Ground   Analog Ground - Must be connected to ground on application PCB   GND   Ground   GND	38	BLEMOD	RF I/O	
Should be connected to Pin 38 BLEMOD for normal operation 40 GND Ground Analog Ground – Must be connected to ground on application PCB 41 GND Ground Analog Ground – Must be connected to ground on application PCB 42 GND Ground Analog Ground – Must be connected to ground on application PCB 43 GND Ground Analog Ground – Must be connected to ground on application PCB 44 GND Ground Analog Ground – Must be connected to ground on application PCB 45 GND Ground Analog Ground – Must be connected to ground on application PCB 46 GND Ground Analog Ground – Must be connected to ground on application PCB 47 GND Ground Analog Ground – Must be connected to ground on application PCB 48 GND Ground Analog Ground – Must be connected to ground on application PCB 49 GND Ground Analog Ground – Must be connected to ground on application PCB 49 GND Ground Analog Ground – Must be connected to ground on application PCB 49 GND Ground Analog Ground – Must be connected to ground on application PCB 50 GND Ground Analog Ground – Must be connected to ground on application PCB 51 VDD Power External supply for DW1000 52 SWDCLK Digital Input nRF52 Serial Wire Debug clock input for debug and programming 53 SWDIO Digital I/O nRF52 Serial Wire Debug I/O for debug and programming 54 P0.21 Digital I/O nRF52 Serial Wire Debug I/O pin 55 P0.22 Digital I/O nRF52 general purpose I/O pin 56 IRQ Digital I/O nRF52 general purpose I/O pin 57 P0.18 Digital I/O nRF52 general purpose I/O pin 58 P0.20 Digital I/O nRF52 general purpose I/O pin 59 SPICLK Digital I/O Digital I/O DW1000 SPI clock Should be connected to nRF52 general purpose I/O pin		DIFANIT	DE 1/0	
40         GND         Ground         Analog Ground – Must be connected to ground on application PCB           41         GND         Ground         Analog Ground – Must be connected to ground on application PCB           42         GND         Ground         Analog Ground – Must be connected to ground on application PCB           43         GND         Ground         Analog Ground – Must be connected to ground on application PCB           44         GND         Ground         Analog Ground – Must be connected to ground on application PCB           45         GND         Ground         Analog Ground – Must be connected to ground on application PCB           46         GND         Ground         Analog Ground – Must be connected to ground on application PCB           47         GND         Ground         Analog Ground – Must be connected to ground on application PCB           48         GND         Ground         Analog Ground – Must be connected to ground on application PCB           49         GND         Ground         Analog Ground – Must be connected to ground on application PCB           50         GND         Ground         Analog Ground – Must be connected to ground on application PCB           51         VDD         Power         External supply for DW1000           52         SWDCLK         Digital I/O         nRF52 Serial Wire D	39	BLEANT	RF I/O	
41       GND       Ground       Analog Ground – Must be connected to ground on application PCB         42       GND       Ground       Analog Ground – Must be connected to ground on application PCB         43       GND       Ground       Analog Ground – Must be connected to ground on application PCB         44       GND       Ground       Analog Ground – Must be connected to ground on application PCB         45       GND       Ground       Analog Ground – Must be connected to ground on application PCB         46       GND       Ground       Analog Ground – Must be connected to ground on application PCB         47       GND       Ground       Analog Ground – Must be connected to ground on application PCB         48       GND       Ground       Analog Ground – Must be connected to ground on application PCB         49       GND       Ground       Analog Ground – Must be connected to ground on application PCB         50       GND       Ground       Analog Ground – Must be connected to ground on application PCB         51       VDD       Power       External supply for DW1000         52       SWDCLK       Digital I/O       nRF52 Serial Wire Debug Clock input for debug and programming         53       SWDIO       Digital I/O       nRF52 Serial Wire Debug I/O pin         54       P0.21       Di	40	OND	01	
42GNDGroundAnalog Ground – Must be connected to ground on application PCB43GNDGroundAnalog Ground – Must be connected to ground on application PCB44GNDGroundAnalog Ground – Must be connected to ground on application PCB45GNDGroundAnalog Ground – Must be connected to ground on application PCB46GNDGroundAnalog Ground – Must be connected to ground on application PCB47GNDGroundAnalog Ground – Must be connected to ground on application PCB48GNDGroundAnalog Ground – Must be connected to ground on application PCB49GNDGroundAnalog Ground – Must be connected to ground on application PCB50GNDGroundAnalog Ground – Must be connected to ground on application PCB51VDDPowerExternal supply for DW100052SWDCLKDigital InputnRF52 Serial Wire Debug clock input for debug and programming53SWDIODigital I/OnRF52 Serial Wire Debug I/O for debug and programming54P0.21Digital I/OnRF52 general purpose I/O pin55P0.22Digital I/OnRF52 general purpose I/O pin56IRQDigital I/ODW1000 IRQ output (default: active high, to be pulled down) Should be connected to nRF52 general purpose I/O pin57P0.18Digital I/OnRF52 general purpose I/O pin58P0.20Digital I/OnRF52 general purpose I/O pin59SPICLKDigital I/OnRF52 general purpose I/O pin <td></td> <td></td> <td></td> <td></td>				
43GNDGroundAnalog Ground – Must be connected to ground on application PCB44GNDGroundAnalog Ground – Must be connected to ground on application PCB45GNDGroundAnalog Ground – Must be connected to ground on application PCB46GNDGroundAnalog Ground – Must be connected to ground on application PCB47GNDGroundAnalog Ground – Must be connected to ground on application PCB48GNDGroundAnalog Ground – Must be connected to ground on application PCB49GNDGroundAnalog Ground – Must be connected to ground on application PCB50GNDGroundAnalog Ground – Must be connected to ground on application PCB51VDDPowerExternal supply for DW100052SWDCLKDigital InputnRF52 Serial Wire Debug clock input for debug and programming53SWDIODigital I/OnRF52 Serial Wire Debug I/O for debug and programming54P0.21Digital I/OnRF52 general purpose I/O pin55P0.22Digital I/OnRF52 general purpose I/O pin56IRQDigital I/ODW1000 IRQ output (default: active high, to be pulled down) Should be connected to nRF52 general purpose I/O pin57P0.18Digital I/OnRF52 general purpose I/O pin58P0.20Digital I/OnRF52 general purpose I/O pin59SPICLKDigital I/OnRF52 general purpose I/O pin				
44GNDGroundAnalog Ground – Must be connected to ground on application PCB45GNDGroundAnalog Ground – Must be connected to ground on application PCB46GNDGroundAnalog Ground – Must be connected to ground on application PCB47GNDGroundAnalog Ground – Must be connected to ground on application PCB48GNDGroundAnalog Ground – Must be connected to ground on application PCB49GNDGroundAnalog Ground – Must be connected to ground on application PCB50GNDGroundAnalog Ground – Must be connected to ground on application PCB51VDDPowerExternal supply for DW100052SWDCLKDigital InputnRF52 Serial Wire Debug clock input for debug and programming53SWDIODigital I/OnRF52 Serial Wire Debug I/O for debug and programming54P0.21Digital I/OnRF52 general purpose I/O pin55P0.22Digital I/OnRF52 general purpose I/O pin56IRQDigital I/ODW1000 IRQ output (default: active high, to be pulled down) Should be connected to nRF52 general purpose I/O pin57P0.18Digital I/OnRF52 general purpose I/O pin58P0.20Digital I/OnRF52 general purpose I/O pin59SPICLKDigital I/OnRF52 general purpose I/O pin				
45GNDGroundAnalog Ground – Must be connected to ground on application PCB46GNDGroundAnalog Ground – Must be connected to ground on application PCB47GNDGroundAnalog Ground – Must be connected to ground on application PCB48GNDGroundAnalog Ground – Must be connected to ground on application PCB49GNDGroundAnalog Ground – Must be connected to ground on application PCB50GNDGroundAnalog Ground – Must be connected to ground on application PCB51VDDPowerExternal supply for DW100052SWDCLKDigital InputnRF52 Serial Wire Debug clock input for debug and programming53SWDIODigital I/OnRF52 Serial Wire Debug I/O for debug and programming54P0.21Digital I/OnRF52 general purpose I/O pin55P0.22Digital I/OnRF52 general purpose I/O pin56IRQDigital I/ODW1000 IRQ output (default: active high, to be pulled down) Should be connected to nRF52 general purpose I/O pin57P0.18Digital I/OnRF52 general purpose I/O pin58P0.20Digital I/OnRF52 general purpose I/O pin59SPICLKDigital I/OnRF52 general purpose I/O pin59SPICLKDigital I/ODW1000 SPI clock Should be connected to nRF52 general purpose I/O pin				
46GNDGroundAnalog Ground – Must be connected to ground on application PCB47GNDGroundAnalog Ground – Must be connected to ground on application PCB48GNDGroundAnalog Ground – Must be connected to ground on application PCB49GNDGroundAnalog Ground – Must be connected to ground on application PCB50GNDGroundAnalog Ground – Must be connected to ground on application PCB51VDDPowerExternal supply for DW100052SWDCLKDigital InputnRF52 Serial Wire Debug clock input for debug and programming53SWDIODigital I/OnRF52 Serial Wire Debug I/O for debug and programming54P0.21Digital I/OnRF52 general purpose I/O pin55P0.22Digital I/OnRF52 general purpose I/O pin56IRQDigital I/ODW1000 IRQ output (default: active high, to be pulled down) Should be connected to nRF52 general purpose I/O pin57P0.18Digital I/OnRF52 general purpose I/O pin58P0.20Digital I/OnRF52 general purpose I/O pin59SPICLKDigital I/OnRF52 general purpose I/O pin				
47GNDGroundAnalog Ground – Must be connected to ground on application PCB48GNDGroundAnalog Ground – Must be connected to ground on application PCB49GNDGroundAnalog Ground – Must be connected to ground on application PCB50GNDGroundAnalog Ground – Must be connected to ground on application PCB51VDDPowerExternal supply for DW100052SWDCLKDigital InputnRF52 Serial Wire Debug clock input for debug and programming53SWDIODigital I/OnRF52 Serial Wire Debug I/O for debug and programming54P0.21Digital I/OnRF52 general purpose I/O pin55P0.22Digital I/OnRF52 general purpose I/O pin56IRQDigital I/ODW1000 IRQ output (default: active high, to be pulled down) Should be connected to nRF52 general purpose I/O pin57P0.18Digital I/OnRF52 general purpose I/O pin58P0.20Digital I/OnRF52 general purpose I/O pin59SPICLKDigital I/ODW1000 SPI clock Should be connected to nRF52 general purpose I/O pin				
48 GND Ground Analog Ground – Must be connected to ground on application PCB 49 GND Ground Analog Ground – Must be connected to ground on application PCB 50 GND Ground Analog Ground – Must be connected to ground on application PCB 51 VDD Power External supply for DW1000 52 SWDCLK Digital Input nRF52 Serial Wire Debug clock input for debug and programming 53 SWDIO Digital I/O nRF52 Serial Wire Debug I/O for debug and programming 54 P0.21 Digital I/O nRF52 general purpose I/O pin MRESET May be configured as nRF52 RESET pin 55 P0.22 Digital I/O nRF52 general purpose I/O pin 56 IRQ Digital I/O DW1000 IRQ output (default: active high, to be pulled down) Should be connected to nRF52 general purpose I/O pin If IRQ is not required, DW1000 general purpose I/O pin 57 P0.18 Digital I/O nRF52 general purpose I/O pin 58 P0.20 Digital I/O nRF52 general purpose I/O pin 59 SPICLK Digital I/O DW1000 SPI clock Should be connected to nRF52 general purpose I/O pin				
49GNDGroundAnalog Ground – Must be connected to ground on application PCB50GNDGroundAnalog Ground – Must be connected to ground on application PCB51VDDPowerExternal supply for DW100052SWDCLKDigital InputnRF52 Serial Wire Debug clock input for debug and programming53SWDIODigital I/OnRF52 Serial Wire Debug I/O for debug and programming54P0.21Digital I/OnRF52 general purpose I/O pinMRESETMay be configured as nRF52 RESET pin55P0.22Digital I/OnRF52 general purpose I/O pin56IRQDigital I/ODW1000 IRQ output (default: active high, to be pulled down) Should be connected to nRF52 general purpose I/O pin57P0.18Digital I/OnRF52 general purpose I/O pin58P0.20Digital I/OnRF52 general purpose I/O pin59SPICLKDigital I/ODW1000 SPI clock Should be connected to nRF52 general purpose I/O pin				
50GNDGroundAnalog Ground – Must be connected to ground on application PCB51VDDPowerExternal supply for DW100052SWDCLKDigital InputnRF52 Serial Wire Debug clock input for debug and programming53SWDIODigital I/OnRF52 Serial Wire Debug I/O for debug and programming54P0.21Digital I/OnRF52 general purpose I/O pinMRESETMay be configured as nRF52 RESET pin55P0.22Digital I/OnRF52 general purpose I/O pin56IRQDigital I/ODW1000 IRQ output (default: active high, to be pulled down) Should be connected to nRF52 general purpose I/O pin57P0.18Digital I/OnRF52 general purpose I/O pin58P0.20Digital I/OnRF52 general purpose I/O pin59SPICLKDigital I/ODW1000 SPI clock Should be connected to nRF52 general purpose I/O pin				
SVDD				
SWDCLK  Digital Input  RF52 Serial Wire Debug clock input for debug and programming  SWDIO  Digital I/O  RF52 Serial Wire Debug I/O for debug and programming  RF52 Serial Wire Debug I/O for debug and programming  RF52 Serial Wire Debug I/O for debug and programming  RF52 Serial Wire Debug I/O for debug and programming  RF52 Serial Wire Debug I/O for debug and programming  RF52 Serial Wire Debug I/O for debug and programming  RF52 Serial Wire Debug I/O for debug and programming  RF52 Serial Wire Debug I/O for debug and programming  RF52 Serial Wire Debug I/O for debug and programming  RF52 Serial Wire Debug I/O for debug and programming  RF52 general purpose I/O pin  May be configured as nRF52 RESET pin  RF52 general purpose I/O pin  Should be connected to nRF52 general purpose I/O pin  RF52 general purpose I/O pin  DW1000 SPI clock  Should be connected to nRF52 general purpose I/O pin				
programming  SWDIO  Digital I/O  NRF52 Serial Wire Debug I/O for debug and programming  NRF52 Serial Wire Debug I/O for debug and programming  NRF52 Serial Wire Debug I/O for debug and programming  NRF52 Serial Wire Debug I/O for debug and programming  NRF52 Serial Wire Debug I/O for debug and programming  NRF52 Serial Wire Debug I/O pin  NRF52 Serial Wire Debu				
53SWDIODigital I/OnRF52 Serial Wire Debug I/O for debug and programming54P0.21Digital I/OnRF52 general purpose I/O pinMRESETMay be configured as nRF52 RESET pin55P0.22Digital I/OnRF52 general purpose I/O pin56IRQDigital I/ODW1000 IRQ output (default: active high, to be pulled down) Should be connected to nRF52 general purpose I/O pin57P0.18Digital I/OnRF52 general purpose I/O pin58P0.20Digital I/OnRF52 general purpose I/O pin59SPICLKDigital I/ODW1000 SPI clock Should be connected to nRF52 general purpose I/O pin	52	SWDCLK	Digital Input	
54P0.21Digital I/OnRF52 general purpose I/O pin May be configured as nRF52 RESET pin55P0.22Digital I/OnRF52 general purpose I/O pin56IRQDigital I/ODW1000 IRQ output (default: active high, to be pulled down) Should be connected to nRF52 general purpose I/O pin If IRQ is not required, DW1000 general purpose I/O pin57P0.18Digital I/OnRF52 general purpose I/O pin58P0.20Digital I/OnRF52 general purpose I/O pin59SPICLKDigital I/ODW1000 SPI clock Should be connected to nRF52 general purpose I/O pin	53	SWDIO	Digital I/O	
MRESET  May be configured as nRF52 RESET pin  NRF52 general purpose I/O pin  RF52 general purpose I/O pin  DW1000 IRQ output (default: active high, to be pulled down)  Should be connected to nRF52 general purpose I/O pin  If IRQ is not required, DW1000 general purpose I/O pin  RF52 general purpose I/O pin  SPICLK  Digital I/O  DW1000 SPI clock  Should be connected to nRF52 general purpose I/O pin				ů i i
Digital I/O   Digital I/O   DW1000 IRQ output (default: active high, to be pulled down)   Should be connected to nRF52 general purpose I/O pin   If IRQ is not required, DW1000 general purpose I/O pin   If IRQ is not required, DW1000 general purpose I/O pin   NRF52 general purpose I/O pin   NRF52 general purpose I/O pin   Digital I/O   DW1000 SPI clock   Should be connected to nRF52 general purpose I/O pin   DW1000 SPI clock   Should be connected to nRF52 general purpose I/O pin   DW1000 SPI clock   Should be connected to nRF52 general purpose I/O pin   DW1000 SPI clock   Should be connected to nRF52 general purpose I/O pin   DW1000 SPI clock   Should be connected to nRF52 general purpose I/O pin   DW1000 SPI clock   Should be connected to nRF52 general purpose I/O pin   DW1000 SPI clock   Should be connected to nRF52 general purpose I/O pin   DW1000 SPI clock   Should be connected to nRF52 general purpose I/O pin   DW1000 SPI clock   Should be connected to nRF52 general purpose I/O pin   DW1000 SPI clock   Should be connected to nRF52 general purpose I/O pin   DW1000 SPI clock   Should be connected to nRF52 general purpose I/O pin   DW1000 SPI clock   Should be connected to nRF52 general purpose I/O pin   DW1000 SPI clock   Should be connected to nRF52 general purpose I/O pin   DW1000 SPI clock   Should be connected to nRF52 general purpose I/O pin   SPI clock   Should be connected to nRF52 general purpose I/O pin   SPI clock   SPI	] .		Digital I/O	
56IRQDigital I/ODW1000 IRQ output (default: active high, to be pulled down) Should be connected to nRF52 general purpose I/O pin If IRQ is not required, DW1000 general purpose I/O pin57P0.18Digital I/OnRF52 general purpose I/O pin58P0.20Digital I/OnRF52 general purpose I/O pin59SPICLKDigital I/ODW1000 SPI clock Should be connected to nRF52 general purpose I/O pin	55		Digital I/O	
Should be connected to nRF52 general purpose I/O pin If IRQ is not required, DW1000 general purpose I/O pin  57 P0.18 Digital I/O nRF52 general purpose I/O pin  58 P0.20 Digital I/O nRF52 general purpose I/O pin  59 SPICLK Digital I/O DW1000 SPI clock Should be connected to nRF52 general purpose I/O pin				
GPIO8 If IRQ is not required, DW1000 general purpose I/O pin  57 P0.18 Digital I/O nRF52 general purpose I/O pin  58 P0.20 Digital I/O nRF52 general purpose I/O pin  59 SPICLK Digital I/O DW1000 SPI clock Should be connected to nRF52 general purpose I/O pin			2.9	
57 P0.18 Digital I/O nRF52 general purpose I/O pin 58 P0.20 Digital I/O nRF52 general purpose I/O pin 59 SPICLK Digital I/O DW1000 SPI clock Should be connected to nRF52 general purpose I/O pin		GPIO8		
58 P0.20 Digital I/O nRF52 general purpose I/O pin 59 SPICLK Digital I/O DW1000 SPI clock Should be connected to nRF52 general purpose I/O pin	57		Digital I/O	
59 SPICLK Digital I/O DW1000 SPI clock Should be connected to nRF52 general purpose I/O pin			<u> </u>	
Should be connected to nRF52 general purpose I/O pin			<u> </u>	
			- 13.13.1 "	
	60	P0.16	Digital I/O	



## **Preliminary Data Sheet**

Pin	Name	Pin function	Description
61	SPIMISO	Digital I/O	DW1000 SPI data output
			Should be connected to nRF52 general purpose I/O pin
62	P0.17	Digital I/O	nRF52 general purpose I/O pin
63	SPIMOSI	Digital I/O	DW1000 SPI data output
			Should be connected to nRF52 general purpose I/O pin
64	P0.19	Digital I/O	nRF52 general purpose I/O pin
65	SRESET	Digital I/O	DW1000 active-low RESET pin
			May be pulled low by external open-drain driver
			Must not be pulled high
66	P0.15	Digital I/O	nRF52 general purpose I/O pin
67	SPICS	Digital I/O	DW1000 SPI Chip Select, active low
			Should be connected to nRF52 general purpose I/O pin
			The high-to-low transition begins a new SPI transaction
			May also act as a wake-up signal to bring DW1000 out of sleep
			or deep-sleep states
68	P0.13	Digital I/O	nRF52 general purpose I/O pin
69	WAKEUP	Digital Input	Active high, brings the DW1000 out of sleep or deepsleep
			states into operational mode
70	P0.11	Digital I/O	nRF52 general purpose I/O pin
71 93	NC	Not Connected	Isolated pad on application PCB for mechanical stability
94 97	GND	Ground	Power Ground – Must be connected to ground on application PCB

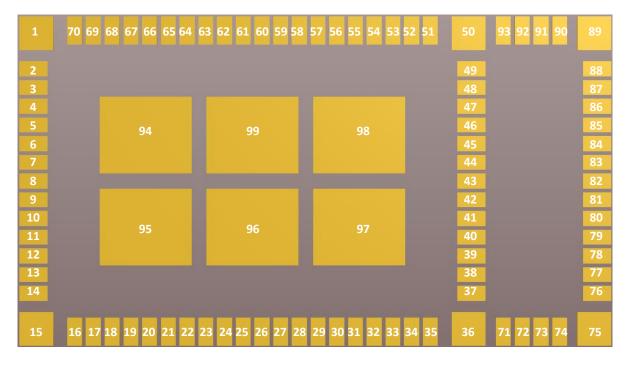

ISP1510 pad placement and pin assignment for the LGA QFN package TOP VIEW





## **Preliminary Data Sheet**

## 4. Mechanical Outlines

#### 4.1. Mechanical Dimensions


Dimensional drawing for 9.00 x 16.00 x 1.86 mm, 99-Pad LGA Package

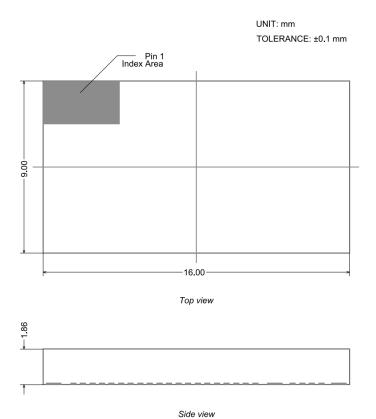

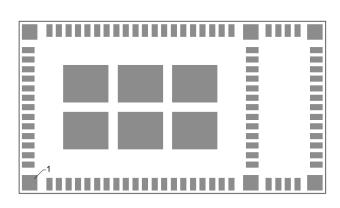


Bottom view

## **Preliminary Data Sheet**

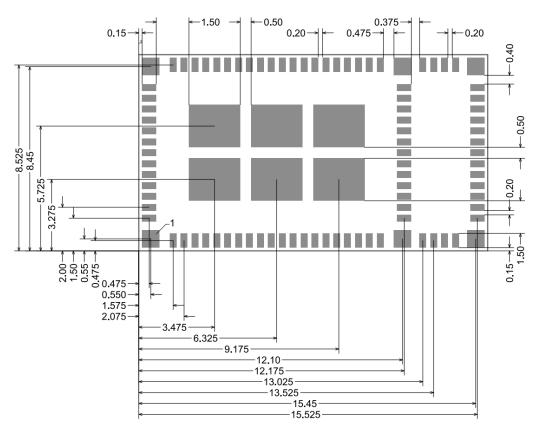

Bottom view

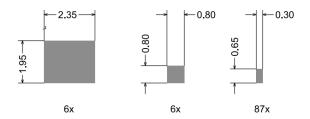

## **Preliminary Data Sheet**


#### 4.2. SMT Assembly Guidelines

For PCB Land Patterns and Solder Mask layout, Insight SiP recommends to use the same dimensions as the module pads, i.e.  $0.65 \times 0.30$  mm for standard pads,  $0.80 \times 0.80$  mm for corner pads,  $2.35 \times 1.95$  mm for mechanical pads.

Please contact Insight SiP for more detailed information.

## 4.3. Antenna Keep-Out Zone

For optimal antenna performance, it is recommended to respect a metal exclusion zone to the edge of the board: no metal, no traces and no components on any application PCB layer except mechanical LGA pads.

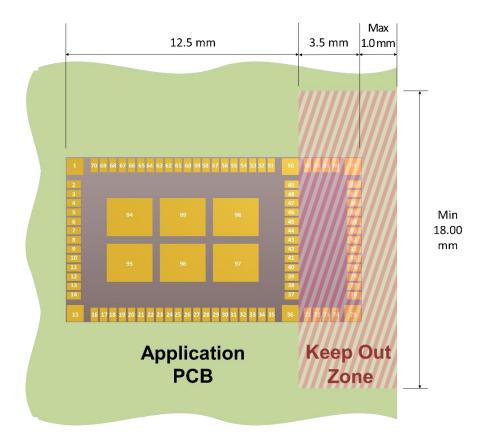



## **Preliminary Data Sheet**

## 5. Product Development Tools

#### 5.1. Hardware

In order to assist clients in developing their Bluetooth Smart solutions based on the ISP1510, Insight SIP offers a Development Kit containing:

- One Interface Board with integrated J-Link OB JTAG/SWD Emulator
- One Test Board
- A Development Dongle
- 5 ISP1510 module samples
- A ranging demonstration including 1 anchor board, 1 tag board, embedded firmware and Android App
- Cables, power supply and coin battery holder

Using this development kit, product developers can use a working solution as starting point to develop their own products. Time to market is saved by avoiding starting from a blank sheet of paper. In addition, some applications may employ the hardware as is.

#### 5.2. Firmware

The source code for the embedded firmware (BLE+UWB ranging demo) is freely provided by Insight SiP as is.

Bluetooth Low Energy protocol stacks are downloadable from www.nordicsemi.com. The S132 SoftDevice is a Bluetooth® low energy (BLE) Central and Peripheral protocol stack solution supporting up to three Central and one Peripheral simultaneous connections and concurrent Observer and Broadcaster roles. It integrates a low energy Controller and Host, and provides a full and flexible API for building Bluetooth low energy System on Chip (SoC) solutions.



## **Preliminary Data Sheet**

## 5.3. Development Tools

The following development tools and software are recommended for using and testing ISP1510 module:

- ♣ DecaWave DW1000 Datasheet and User Manual downloadable at www.decawave.com
- Nordic Semiconductor nRFgo Studio: Downloadable after registering at www.nordicsemi.com.
- Nordic Semiconductor Master Control Panel: Downloadable after registering at www.nordicsemi.com.
- ♣ Keil MDK-ARM Lite: Downloadable from https://www.keil.com/demo/eval/arm.htm.
- Segger J-Link Lite: Downloadable from http://www.segger.com/jlink-software.html.
- nRF52 Software Development Kit (SDK): nRF52 SDK can be downloaded after registering at www.nordicsemi.com. It contains example of source codes applications (C language):
  - Precompiled HEX files
  - Source code
  - Keil ARM project files
  - IAR project files



## **Preliminary Data Sheet**

## 6. Packaging & Ordering information

#### 6.1. Marking

М	/N	:	I	S	Р	1	5	1	0
Т	Т		Υ	Υ	W	W	R		

ISP1510	Part Number
TT	2 letters Module Type (see section 6.5)
YY	2 digits year number
WW	2 digits week number
R	1 letter Hardware revision



## 6.2. Prototype Packaging

For engineering samples and prototype quantities up to 99 units, deliveries are provided in thermoformed trays. Please order with "ST" code packaging suffix.

These parts must be backed prior to assembly (see section 7.2).





#### 6.3. Jedec Trays

For higher quantities and volume production, ISP1510 are available in Jedec trays. They are delivered in sealed pack with desiccant pack and humidity sensors. These Jedec trays are also suitable for further baking. Please see section 7.2 for more information on moisture sensitivity.

Jedec trays are proposed in standard quantities of 100 units, 200 units and multiples of 200 units only. Please order with "J1" code packaging suffix for 100-unit tray and "J2" for 200 and multiple unit trays.

Complete information on Jedec trays is available on request.




## **Preliminary Data Sheet**

#### 6.4. Tape and Reel

ISP1510 are also available in Tape & Reel. They are delivered in sealed pack with desiccant pack and humidity sensors. Reels are proposed in standard quantities of 500 units (180mm / 7" reel) or 2000 units (330mm / 13" reel) only. Please order with "RS" code packaging suffix for 500-unit reels and "R2" for 2000-unit reels.

Complete information is available on request.

#### 6.5. Ordering Information

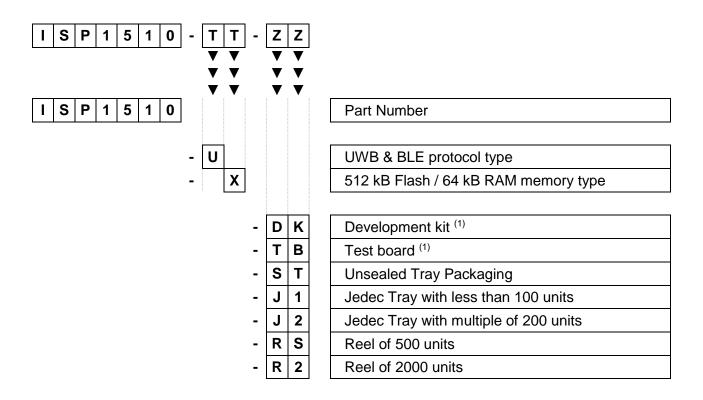

(1) Please see section 5.1 and refer to the following documentation for more information on development kit and test board:

http://www.insightsip.com/fichiers insightsip/pdf/ble/isp ble DS1510 DK.pdf




## **Preliminary Data Sheet**

## 7. Storage & Soldering information

## 7.1. Storage and Handling

- Keep this product away from other high frequency devices which may interfere with operation such as other transmitters and devices generating high frequencies.
- ♣ Do not expose the module to the following conditions:
  - Corrosive gasses such as Cl2, H2S, NH3, SO2, or NOX
  - Extreme humidity or salty air
  - Prolonged exposure to direct Sunlight
  - Temperatures beyond those specified for storage
- Do not apply mechanical stress
- Do not drop or shock the module
- ♣ Avoid static electricity, ESD and high voltage as these may damage the module

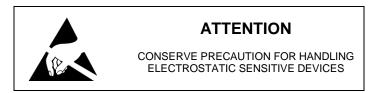

#### 7.2. Moisture Sensitivity

All plastic packages absorb moisture. During typical solder reflow operations when SMDs are mounted onto a PCB, the entire PCB and device population are exposed to a rapid change in ambient temperature. Any absorbed moisture is quickly turned into superheated steam. This sudden change in vapor pressure can cause the package to swell. If the pressure exerted exceeds the flexural strength of the plastic mold compound, then it is possible to crack the package. Even if the package does not crack, interfacial delamination can occur.

Since the device package is sensitive to moisture absorption, it is recommended to bake the product before assembly. The baking process for dry packing is 24 hours at 125°C.


ISP1510 has been tested MSL-5 according to standards. After baking, modules can be exposed to ambient room conditions (approximately 30 °C/60%RH) during 48 hours before assembly on the PCB.



## **Preliminary Data Sheet**

## 7.3. Soldering information

Recommendation for RoHS reflow process is according to Jedec J-STD-020 and 033 standard profiles.

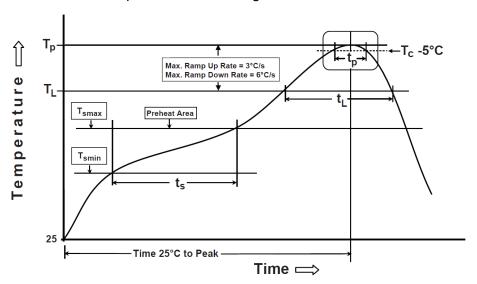

Preheat/Soak Temperature Min (T <sub>smin</sub> ) Temperature Max (T <sub>smax</sub> ) Time (t <sub>s</sub> ) from (T <sub>smin</sub> to T <sub>smax</sub> )	150 °C 200 °C 60-120 sec
Ramp-up rate (T <sub>L</sub> to T <sub>p</sub> )	3 °C/sec max
Liquidous temperature (T <sub>L</sub> ) Time (t <sub>L</sub> ) maintained above T <sub>L</sub>	217 °C 60-150 sec

Peak package body temperature (T <sub>p</sub> )	260°C (+0/-5°C)
Classification Temperature (T <sub>c</sub> ) Time (t <sub>p</sub> ) maintained above T <sub>C</sub> -5 °C	260 °C 30 sec
Ramp-down rate $(T_p \text{ to } T_L)$	6 °C/sec max
Time 25 °C to peak temperature	8 mn max



## **Preliminary Data Sheet**


## 8. Quality & User information

#### 8.1. Pending Certifications

- FCC Identifier tbd
- ♣ IC Certification tbd.
- ♣ Bluetooth SIG certified N° tbd
- RoHS compliant

#### 8.2. USA – User information

This intends to inform how to specify the FCC ID of our module "ISP1510" on the product. Based on the Public Notice from FCC, the host device should have a label which indicates that it contains our module. The label should use wording such as:

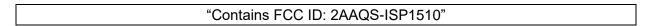

Any similar wording that expresses the same meaning may be used.

The label of the host device should also include the below FCC Statement. When it is not possible, this information should be included in the User Manual of the host device:

- "This device complies with part 15 of the FCC rules. Operation is subject to the following two conditions.
- (1) This device may not cause harmful interference
- (2) This device must accept any interference received, including interference that may cause undesired operation.

Caution: Any Changes or modifications not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment."

#### 8.3. Canada – User information

This intends to inform how to specify the IC ID of our module "ISP1510" on the product. According to Canadian standards "RSS-210" and "RSS-Gen", the host device should have a label which indicates that it contains our module. The label should use wording such as:

"Contains IC: 11306A-ISP1510"	

Any similar wording that expresses the same meaning may be used.



## **Preliminary Data Sheet**

The label of the host device should also include the below IC Statement. When it is not possible, this information should be included in the User Manual of the host device:

"This device complies with Industry Canada licence-exempt RSS standard(s). Operation is subject to the following two conditions: (1) this device may not cause interference, and (2) this device must accept any interference, including interference that may cause undesired operation of the device.

Le présent appareil est conforme aux CNR d'Industrie Canada applicables aux appareils radio exempts de licence. L'exploitation est autorisée aux deux conditions suivantes : (1) l'appareil ne doit pas produire de brouillage, et (2) l'utilisateur de l'appareil doit accepter tout brouillage radioélectrique subi, même si le brouillage est susceptible d'en compromettre le fonctionnement."

#### 8.4. RF Exposure Information

This equipment complies with FCC/IC radiation exposure limits set forth for an uncontrolled environment and meets the FCC radio frequency (RF) Exposure Guidelines in Supplement C to OET65 and RSS-102 of the IC radio frequency (RF) Exposure rules. This equipment has very low levels of RF energy that it deemed to comply without maximum permissive exposure evaluation (MPE).

#### 8.5. Informations concernant l'exposition aux fréquences radio (RF)

La puissance de sortie émise par l'appareil de sans fil est inférieure à la limite d'exposition aux fréquences radio d'Industry Canada (IC). Ce module a également été évalué et démontré conforme aux limites d'exposition aux RF d'IC dans des conditions d'exposition à des appareils mobiles et/ou portables.

#### 8.6. Discontinuity

Normally a product will continue to be manufactured as long as all of the following are true:

- The manufacturing method is still available.
- There are no replacement products.
- There is demand for it in the market.

In case of obsolescence, Insight SiP will follow Jedec Standard JSD-48. A Product Discontinuation Notice (PDN) will be sent to all distributors and made available on our website. After this, the procedure goes as follows:

- Last Order Date will be 6 months after the PDN was published.
- Last Shipment Date will be 6 months after Last Order Date, i.e. 12 months after PDN.



## **Preliminary Data Sheet**

#### 8.7. Disclaimer

Insight SiP's products are designed and manufactured for general consumer applications, so testing and use of the product shall be conducted at customer's own risk and responsibility. Please conduct validation and verification and sufficient reliability evaluation of the products in actual condition of mounting and operating environment before commercial shipment of the equipment. Please also pay attention (i) to apply soldering method that don't deteriorate reliability, (ii) to minimize any mechanical vibration, shock, exposure to any static electricity, (iii) not to overstress the product during and after the soldering process.

The products are not designed for use in any application which requires especially high reliability where malfunction of these products can reasonably be expected to result in personal injury or damage to the third party's life, body or property, including and not limited to (i) aircraft equipment, (ii) aerospace equipment, (iii) undersea equipment, (iv) power plant control equipment, (v) medical equipment, (vi) transportation equipment, (vii) traffic signal equipment, (viii) disaster prevention / crime prevention equipment.

The only warranty that Insight SiP provides regarding the products is its conformance to specifications provided in datasheets. Insight SiP hereby disclaims all other warranties regarding the products, express or implied, including without limitation any warranty of fitness for a particular purpose, that they are defect-free, or against infringement of intellectual property rights. Insight SiP customers agree to indemnify and defend Insight SiP against all claims, damages, costs and expenses that may be incurred, including without any limitation, attorney fees and costs, due to the use of products.



## Insightsip.com 代理商联系方式:

样品,技术支持,参考设计,评估板,报价购买请联系

电话:0755-82565851

邮件:dwin100@dwintech.com

手机:156-2521-4151

网址: http://www.dwintech.com/insight%20Pamphlet.html

深圳市南频科技有限公司

D-Win Technology (HongKong) Co., Ltd